



Figure 1-1

1	Power	2	Play/pause	3	Reverse/ Pause	4	Fast play
5	Slow play	6	Next	7	Previews	8	Assistant
9	Shift	10	Record	11	Cancel	12	Left
13	Down	14	OK	15	Right	16	Up

Please refer to the following sheet for front panel button information:

SN	Button Name	Icon	Function
1	Power		Start or shut down the DVR
2	Play/pause	▶	In play back mode: play or pause video In text box: input number 5.
3	Reverse/pause	◀	In playback mode: reverse play video. In text box: input number 6
4	Fast play	▶▶	In playback mode: click this button to switch between various fast play speeds and normal playback. In text box: input number 7
5	Slow play	▶	In playback mode: click this button to switch between various slow play speeds and normal playback. In text box: input number 8
6	Next	▶	In playback mode: play the next video. In text box: input number 9
7	Previous	◀	In playback mode: play the previous video. In text box: input number 0
8	Assistant	FN	In 1-ch monitor mode: pop up assistant function: PTZ control and video color.
In motion detection interface, working with direction keys to finish setup.			
Clear: press FN for 1,5 seconds to clear all contents in current text box.			
In preview interface (there is no other menu), click this button for 3 seconds to switch between TV/VGA.			
In text box input mode, press this button to switch between numeral/English characters (small/capitalized).			
Special combined operation in some menus.			

9	Shift	SHIFT	Input mode, switch between numeral/character and other function keys.
			In four- window preview mode it can work as FN button.
10	Record	REC	Enable or disable record function manually. In record control menu, working with direction keys to select recording channel.
11	Cancel	ESC	Go back to previous menu or cancel current operation in function menu interface.
			In video playback mode, click this button to go back to real-time monitor mode.
14	OK	ENTER	Confirm
			Go to the main menu
12			Move cursor
			In text box: increase or decrease numerals.
			In dropdown list, modify current setup.
			In monitor mode, click this button to go to the 1st channel-1 or 4th channel. (Single- channel monitor mode)
13			In text box input mode, press SHIFT and then use up/down key to input number 1 or 4.
15	Direction keys		In the main menu or submenu interface, click left or right key to move cursor.
16			In play back mode: click left/right key to select corresponding option in the function menu.
			In monitor mode, click left/right key to go to 2nd channel or 3rd channel (single-window monitor mode)
			In text box input and then use left/right key to input number 2 or 3